MULTICS SYSTEM-PROGRAMMERS MANUAL SECTION BG.12.02 PAGE 1

Published: 07/22/68

Identification

disk_init S. D. Dunten

(Note that the following is an Abstract, which should be replaced by a full description at a later time.)

Function of Entry:

Initializes disk_seg for use by disk_control and makes the initializing GIM calls for the disk channels.

Calling Sequence for Entry:

call disk_init(did);

Declaration of Arguments:

dc1 did fixed;

Description of Arguments: device ID