

Published: 05/03/68

Identification

BOS bootload

Boot

S. D. Dunten, T. H. Van Vleck

Purpose

The BOOT command of BOS starts a bootload run of the Multics system by simulating the action of the GIOC diode program (BC.4.01).

Usage

The following BOS command starts a bootload run:

BOOT -n-

Tape n is rewound, core is cleared, and then tape n is started bootloading.

n must be less than 5 since the bootload will use tapes n through n + 3.

The default n is zero.